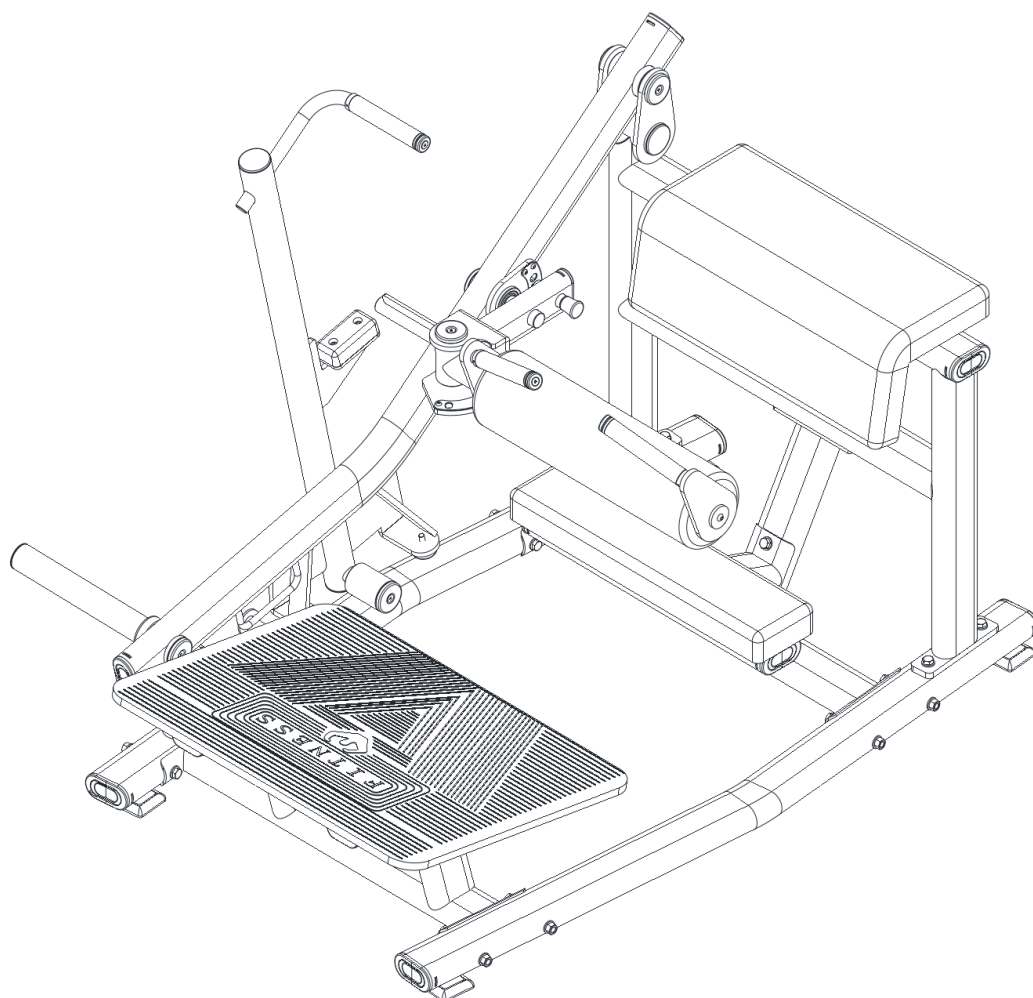 




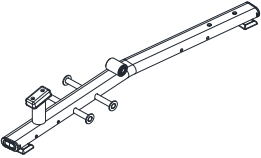 
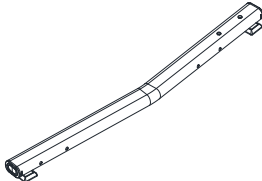 
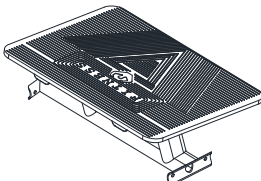 
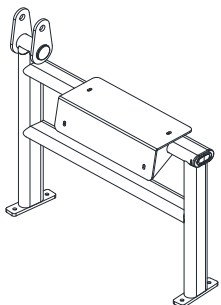 
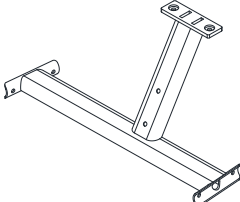 
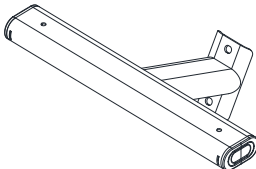 
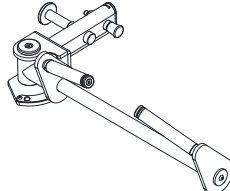 
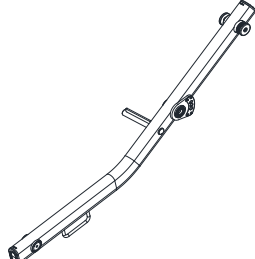 
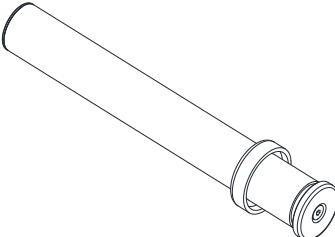 
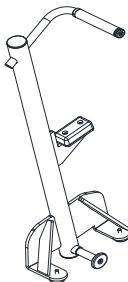 
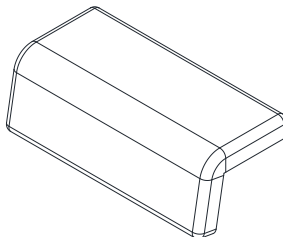 
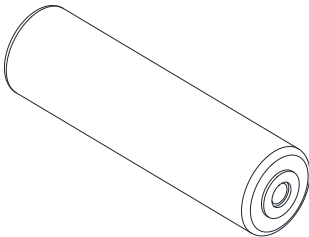 
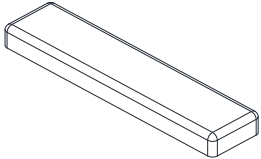 
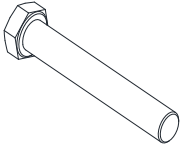 
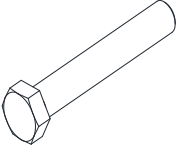 
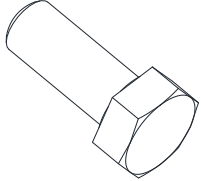 
BS111

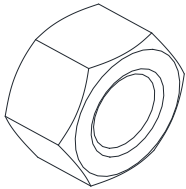 
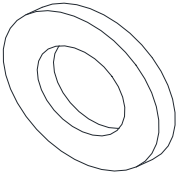 
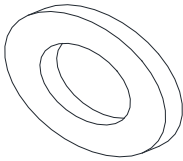 
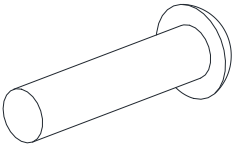 
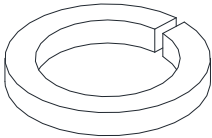 
STRENGTH

Assembly Instructions



Parts List

Right chassis group			Left chassis group			Pedals			backrest group		
											
1		1 PCS	2		1 PCS	3		1 PCS	4		1 PCS
connectome			Cushion group			Movement arm Boom foam group			Movement arm		
											
5		1 PCS	6		1 PCS	7		1 PCS	8		1 PCS
Barrel group			support group			Heap cushion			long foam		
											
9		1 PCS	10		1 PCS	11		1 PCS	12		1 PCS
cushion			Hexagon ScrewM12*125			Hexagon ScrewM12*70			Hexagon ScrewM12*35		
											
13		1 PCS	14		8 PCS	15		2 PCS	16		6 PCS

LocknutM12			Flat pad ϕ 12			Half round head hexagon socket head screwM8*70			Half round head hexagon socket head screwM8*70		
											
17		10 PCS	18		26 PCS	19		4 PCS	20		6 PCS
Half round head hexagon socket headM8*30			spring washer ϕ 8								
											
21		2 PCS	22		6 PCS						

Step (1)

